


mondo

Wi-Fi

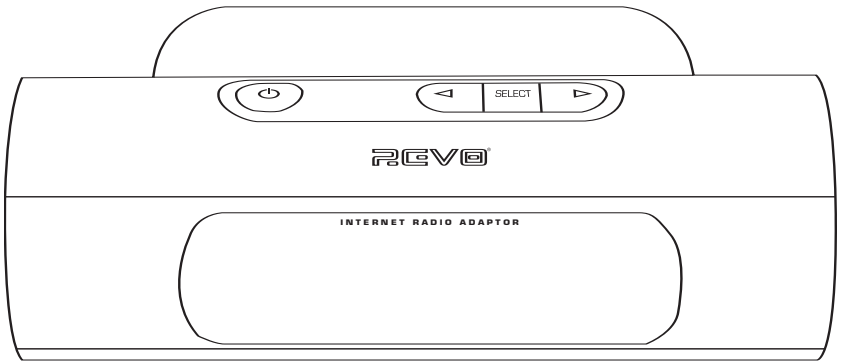

■ Operating Guide

■ mode d'emploi ■ Bedienungsanleitung ■ Mode d'emploi ■ Bruksanvisning

Contents

■ Welcome to Mondo Wi-Fi	3	Setting Mondo's Clock	8
Benefits of Internet Radio	3	Setting An Alarm	8
Mondo Wi-Fi Overview	3	■ Configure Menu	9
Warranty	3	Network Configuration	9
Warranty Registration	3	Version + Firmware Updates	9
■ Before Getting Started	3	Languages	9
Wi-Fi Internet Requirements	3	Factory Reset	9
Connecting Mondo	3	Register	9
■ Controls and Connections	4	Clock	9
■ Remote Control	4	Sleep Mode	9
■ Powering Mondo	4	Backlight	9
■ Reciva Radio Portal	4	Wi-Fi Strength	9
■ Connecting To Your Network	5	■ Media Player Operation	10
■ Choosing a Station	6	Windows + Apple Mac Set-Up	10
Station Updates	6	Accessing Shared Music	10
■ On-Demand Broadcasts	7	General Media Player Operation	10
■ General Operation	7	Windows PC UPnP Set-Up	11
■ Resetting Mondo	7	■ Troubleshooting	12
■ Alarm + Clock Functions	8	■ Spare and Accessories	12

Preface

Copyright and Acknowledgements

Copyright © 2007 Revo Technologies Ltd.
All rights reserved.

Revo Technologies Ltd
The Inox Building
Caldwellside
Lanark
Scotland
United Kingdom
ML11 7SR

Tel. 01555 66 61 61
Int. Tel. +44 1555 66 61 61
Fax. 01555 66 33 44
Int. Fax. +44 1555 66 33 44
Email. enquiries@revo.co.uk
Website: www.revo.co.uk

The information in this guide is believed to be correct at the time of publication. However, our policy is one of continuous development and so the information is subject to change without notice.

Revo, Mondo and M-Port are trademarks or registered trademarks of Revo Technologies Limited.

iPod® is a registered trademark of Apple Computer, Inc.

Safety Warnings

Do not operate this radio near water.
Avoid small objects and liquids from getting into this product.
Do not remove screws or casing parts.
Use only the power supply unit supplied.

EEC: This product has been designed and type-tested to comply with EU requirements and carries a CE mark.

RoHS
COMPLIANT



Technical Support

Should you encounter any difficulties with the operation of your Revo Mondo Wi-Fi, or should you suspect that it may be faulty in some way, please call our technical support department on the number below:

01555 66 61 61

Alternatively, email support@revo.co.uk or visit the troubleshooting section of our website at: www.revo.co.uk/support

Welcome to Mondo Wi-Fi

Thank you for buying our Mondo Wi-Fi internet radio, we feel sure that it will provide you with years of enjoyment and reliable service.

This guide has been designed to quickly get you up-and-running and listening to internet radio, offer guidance on the more complex features of this product and provide information on safety, warranty and registration.

Benefits of Internet Radio

- Access to 7,000+ internet radio stations
- Search by genre or country
- Access 'Listen Again' services
- Station list updates automatically
- No subscription charges

Mondo Wi-Fi Overview

The Mondo Wi-Fi Internet Radio Adaptor is capable of accessing thousands of internet radio stations from all over the world, giving the user an unprecedented choice of radio content.

Mondo Wi-Fi connects to any sound system that has RCA inputs, be it a hi-fi system or boombox type product. It then links to any broadband Wi-Fi connection to stream both live and "Listen Again" internet radio broadcasts.

Mondo has the added benefit of providing full electronic alarm clock functionality.

Warranty

Revo Technologies Ltd warrants to the purchaser that this product will be free from parts and manufacturing defects in the course of normal use for a period of one year from the date of purchase.

This warranty does not apply in cases of accidental damage, where the case has been removed, wear and tear, negligence, modification or inappropriate use.

Should you encounter problems with this product, please contact your supplier or alternatively see page 2 of this guide for technical support contact details.

Warranty Registration

It is a warranty condition that you register your purchase by either completing the warranty card enclosed with your radio or alternatively registering online at www.revo.co.uk/register

Before Getting Started

Wi-Fi Internet Requirements

In order to use your Mondo Wi-Fi internet radio adaptor you will require a wireless (Wi-Fi) broadband Internet connection.

If your wireless network is configured to use Wired Equivalent Privacy (WEP) or Wi-Fi Protected Access (WPA) data encryption, you need to know the WEP or WPA code (Web Key) in order allow Mondo Wi-Fi to

communicate with the network. Mondo Wi-Fi should be able to operate anywhere within 35 metres of the wireless base station – depending on the operating environment and the specification of your wireless base station.


Please ensure that your wireless network is powered-up and connected to your broadband Internet connection.

Connecting Mondo

Mondo can be connected to any audio system that has stereo RCA connectors.

Using the connection leads supplied, simply connect to the corresponding red and black RCA connectors on Mondo's rear panel.

Controls and Connectors

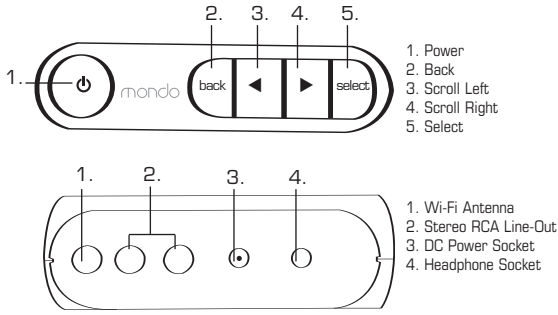

Remote Control



Powering Mondo Wi-Fi

Your Mondo Wi-Fi internet radio adaptor can be powered from the mains using the power adaptor supplied.

To power from the mains, insert the power adaptor plug into the DC power socket on the rear of Mondo Wi-Fi. Pressing the button will switch Mondo Wi-Fi on.

Only use the power adaptor supplied. Replacements can be purchased from our website www.revo.co.uk, or alternatively call us on 01555 66 61 61.

Reciva Radio Portal

The station list used by Mondo Wi-Fi is compiled and managed by Reciva Limited, they also provide the internet radio technology used in Mondo Wi-Fi.

Mondo Wi-Fi users are able to access additional internet radio services by visiting the Reciva Radio Portal at - www.reciva.com and registering their radio.

Connecting To Your Network

- Press the **ON/OFF** button to power-up Mondo Wi-Fi. Mondo's LCD screen will display a welcome message.
- After a few seconds this message will change to 'Initialising Network'
- You will then be given the option to scan for available networks. Press the **SELECT** button to action this request.

NOTE: If you make a mistake at any point, press **BACK** to return to previous screen.

- If Mondo can't find a wireless network it will display the following message.
- If this happens please check that your wireless router is switched on, refer to the manufacturer if problem persists.
- If Mondo does find your wireless network, it will display the network name, for example:
- In some cases Mondo Wi-Fi may find more than one network. Use the ◀ ▶ buttons to see the names of each one – and press the **SELECT** button when the name of your own network is displayed.
- If your network is not configured to request a password (WEP/WPA), Mondo will connect to the network and display:
- If a WEP/WPA key (password) is required, Mondo will display the following:
- After a few seconds, Mondo will ask you to input the WEP/WPA code and will display the password entry screen:

- Use the ◀ ▶ buttons to cycle back and forward through the alpha-numeric character list. Press the **SELECT** button to select a character.

Please note, WEP/WPA pass codes are case-sensitive.

- If you make a mistake while entering your password, press the **BACK** button to delete a character.
- After selecting the final character of your password, scroll to the word 'END' and press the **SELECT** button to enter your code. Mondo Wi-Fi should now successfully connect to your network.
- Mondo Wi-Fi will automatically remember the WEP/WPA code for your network, and other networks you have used previously. You will not need to re-enter these codes in the future.

Revo Mondo
Wi-Fi

Initialising
Network

< Scan for
network >

No Wireless
Networks Found

My Home Network

Network Ok

Enter WEP key

<END> 0 1234>

Connecting to
Network

Network Ok

Using saved key

Choosing a Station

- When Mondo Wi-Fi has connected to your wireless network, you are now ready to select a station.
- **Please Note:** You can move back to the previous screen at any time by pressing the **BACK** button.
- Mondo Wi-Fi has three main menu headings **Stations**, **Configure** and **Media Player**. To select a radio station, use the ◀▶ buttons until the word **STATIONS** appears, then press the **SELECT** button.
- You now have the option of selecting a station by **location** (country) or by **genre**. Use the ◀▶ buttons to pick your search method, then press **SELECT**.
- Choosing **location** will give you an alphabetical list of countries broadcasting internet radio. Use the ◀▶ buttons to scroll through the country list. Press **SELECT** to select your desired location. For example:
- You will then be given the choice of listing all station types in this country, or listing them by genre eg. Pop, Dance... etc.
- Use the ◀▶ keys and press **SELECT** to make your selection, Mondo Wi-Fi will now download the station list for your choice.
- You can now scroll through the station list and make your selection by pressing the **SELECT** button.
- Choosing **Genre** will give you an alphabetical list of station types. Use the ◀▶ keys to view these.
- Press the **SELECT** button to choose your desired genre.
- You will now be given the choice of viewing all stations in this genre, or further sorting them by location (country)
- Now select your chosen station from the alphabetical list.

Station Updates

Occasionally, Mondo Wi-Fi will tell you that it is receiving an updated station list. It does this automatically and periodically, ensuring that Mondo Wi-Fi always has the latest station directory on-board.

<Stations >

<Location >
6537 Stations

OR

<Genre >
6537 Stations

<Albania >
16 Stations

<[All Station] >
323 Stations

OR

< Dance >
323 Stations

Loading 323
Stations

<Cool FM >
96 kbps WMA

< Genre >
6537 Stations

< Dance >
323 Stations


<[All Station] >
323 Stations

<Cool FM >
96 kbps WMA

Station Update
from Reciva

On-Demand Broadcasts

- Some radio stations provide a number of additional ways to listen to content; for example being able to listen to radio shows that have already been broadcast, know as On-Demand or 'Listen-Again'.
- To choose between a 'Live' broadcast or an On-Demand one, simply use the ◀▶ buttons to select your option and press **SELECT** to choose.
- If you select On-Demand, you will be presented with a list of shows that are available to 'Listen Again'.
- Use the ◀▶ buttons until your choice is displayed on the LCD, then press the **SELECT** button to confirm.
- Some stations may allow you to fast-forward through an On-Demand broadcast. Do so by pressing **BROWSE** on the remote control and using the ◀▶ buttons to forward and rewind through the broadcast. Press **SELECT** to play from your selected point.

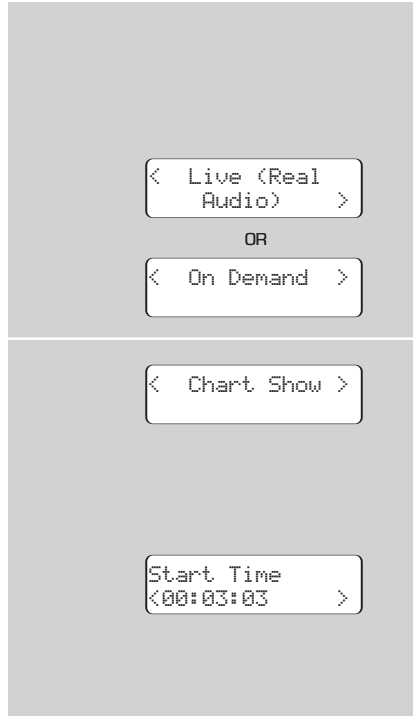

General Operation

Changing Volume

To change Mondo Wi-Fi's volume, press the **VOLUME UP** and **DOWN** buttons on Mondo's remote control, the volume level will be displayed on Mondo's LCD screen. Mondo Wi-Fi will remember its previous volume level after shutdown and power-up.

Internet Radio Presets

Mondo Wi-Fi can store five presets on its remote control. To store the current station, press and hold one of the preset keys for a period of two seconds. To select a stored station, simply press the corresponding preset key.

Returning To Main Menu

You may return to Mondo's top-line main

menu at anytime by pressing the **BACK** button and working back through previous menus.

LCD Backlight

Under standard factory settings, Mondo will dim its LCD backlight after approximately 30 seconds. Pressing any button on Mondo or the remote control will temporarily return the LCD brightness to full. To change these factory settings see the 'Backlight' instructions on page 9 .

Requesting a Station

If you want to listen to a radio station that is not listed in Mondo's station list, you can visit the Reciva website at <http://www.reciva.com/> and make a request to add the station to the list.

Resetting Mondo Wi-Fi

In the unlikely even that Mondo Wi-Fi should 'crash', 'freeze' or stop responding to key presses, it is possible to perform a reset and bring it 'back to life'.

A 'Factory Reset' can be activated from Mondo's 'Configure' menu. Performing a

factory reset will completely reset Mondo's memory, clearing all WEP/WPA codes and user settings. This will effectively return Mondo to its default factory settings.

Alarm + Clock Functions

Setting Mondo's Clock

- Turn Mondo Wi-Fi on and from the Configure menu locate the Clock option. Press **SELECT** and Mondo will give you two options; 'Set Clock' or 'Set Alarm'. Choose 'Set Clock' and press **SELECT**, now use the ◀ ▶ keys to change the hour, then press **SELECT** to set. Mondo Wi-Fi will now ask you to set the minutes in the same way, press **SELECT** to set the time.

Setting An Alarm

- Press the ⏻ button to switch on your radio, then press the ⏻ button on the Mondo Wi-Fi remote control. Use the ◀ ▶ keys to change the hour, then press **SELECT** to set. Mondo Wi-Fi will now ask you to set the minutes in the same way, press **SELECT** to set the alarm time.
- Press the ⏻ button to put Mondo into standby mode. Mondo will now display the current time on the top row of its display, with the alarm time shown in brackets on the second line of the display.
- Mondo Wi-Fi wake you up to an audible tone, to stop the alarm simply press any button on Mondo or its remote control. When the alarm has been deactivated, Mondo will switch to the radio station that was playing before Mondo went into standby mode.

⌘ Clock ⌘

Set Clock
08:10



Set Alarm
00:00

Alarm Set:
07:10



22:35
(07:10 ⌘)

Configure Menu

Network Configuration

Enables you to scan again for connection to another wireless network, or to manually configure the network parameters. You can also choose to enable the 'Low Signal Warning' prompt when your wireless network signal is low.

Version

This will display such information as your device's serial number and hardware/software version numbers. This information may be requested when dealing with technical support issues.

Update Firmware

Use this to check whether there are any firmware updates available for your Mondo Wi-Fi radio adaptor. Mondo will check, and prompt you if there is. You can then make the decision whether to start a firmware download or not. A firmware update can take several minutes, do not switch Mondo Wi-Fi off until this procedure has been completed. Doing so may cause permanent damage.

Language

This allows you to change Mondo's display language. Languages supported include English, French, German, Italian, Norwegian, Danish, Dutch, Portuguese, Spanish, Swedish and Finnish.

Factory Reset

See page 7 for details.

Register

This will display a key code that can be used to register your radio on the Reciva customer portal: <http://www.reciva.com/>

Clock

Set Mondo Wi-Fi's on-board clock via this

menu. It is also possible to access the alarm clock features of Mondo Wi-Fi through this menu, as an alternative to using the remote control.

Sleep Mode

Select Sleep Mode from the configure menu to programme Mondo to turn itself off after a pre-defined period of time. Sleep Mode operates in 15 minute increments, from 15 minutes to 90 minutes. Simply use the ◀ ▶ keys to define the sleep period and press **SELECT**. Mondo Wi-Fi will now automatically put itself into standby mode after the time has elapsed.

Backlight

It is possible to change the brightness of Mondo Wi-Fi's LCD screen via the Configure menu. There are three brightness settings as follows:

Normal: This setting defines Mondo's normal LCD brightness level. Use the ◀ ▶ keys to select the required brightness level and press **SELECT** to set.

Auto-Bright: When switched on, pressing any button on Mondo or its remote control will activate 'Auto-Bright' mode for a period of 30 seconds. The actual brightness level for 'Auto-Bright' is defined by this setting.

Standby: This sets the LCD brightness level for when Mondo Wi-Fi is in 'Standby' mode. Use the ◀ ▶ keys to select the required brightness level and press **SELECT** to set.

Wi-Fi Strength

This will display the strength of your Wi-Fi signal and will range between 0% - 100%. The further Mondo Wi-Fi is away from your Wi-Fi base-station, the weaker the signal strength will be.

Media Player Operation

■ Mondo Wi-Fi's media player functionality allows you to play audio files (AAC, AIFF, AU, MP3, RM, WAV and WMA) and playlists (M3U) stored on a networked PC or Apple Mac. The media player functions have been tested and certified to operate with Windows 2000, Windows XP, Windows Vista and Mac OSX 10.2 or a later version.

Windows PC Set-Up

■ Ensure that your PC is available on the network, then using Windows Explorer, locate the folder where your audio files are stored...then

Right click on the folder.
Select 'Properties'
Click on 'Sharing'
Select "Share this folder on the network" and "Allow network users to change my files". Please note, do not try to make your 'My Documents' or any of its sub-folders (e.g. 'My Music') shareable.

Apple Mac Set-Up

Setup Windows File Sharing on the MAC:

From the 'Dock', click 'System Preferences'. From the 'System Preferences' window (under the 'Internet & Network' section) click 'Sharing'.

From the 'Sharing' window, do the following:

Under the 'Services' section, enable 'Personal File Sharing' and 'Windows Sharing'. Also, click 'Start' for each of these services.

Under the 'Firewall' section, keep firewall off.

Under the 'Internet' section, keep 'Internet Sharing' off.

Setup an Account:

From the 'System Preferences' window, under the 'System' section, click 'Accounts'. Select an account and remember its 'Short Name' and password. This information will be used by Mondo Wi-Fi when connecting to your Mac.

Directory Setup:

From the 'Dock', click 'Finder'. From the 'Finder' window, click 'Applications > Utilities'. Holding Ctrl click on 'Directory Access' then select 'Get Info' and ensure that read / write enabled. Next double click on 'Directory Access' and enable the following:

- | | |
|---|--|
| <input checked="" type="checkbox"/> AppleTalk | <input checked="" type="checkbox"/> LDAPv3 |
| <input checked="" type="checkbox"/> SLP | <input checked="" type="checkbox"/> SMB/CIFS |

Also, for the 'SMB/CIFS' item, click 'Configure' and select an appropriate workgroup.

Copy and paste the audio files to 'Documents' in the 'Finder' window. Ensure that your Mac is successfully connected to the wireless network. Note, you may need to wait for few minutes for the changes to take effect.

You should now be able to access the audio files on your Mac by selecting 'Media Player > Windows Shares' on Mondo Wi-Fi, then selecting your Mac from the list of devices. On selecting your Mac, if no shared folders are found, press the **SELECT** button and select user - at this point you can enter in the 'Short Name' and password for your Mac account.

Accessing 'Shared' Music

When Mondo has connected to your wireless network, press the **BACK** button until 'Stations' is displayed. Use the ◀▶ keys to find the 'Media Player' menu on-screen, then press the **SELECT** button.

Using the ◀▶ keys, find and select "Windows Shares", then 'Scan for PCs'. Mondo will now display 'Finding PCs'. When the scan is complete, use the ◀▶ keys to find your PC and select, Mondo will now search for shared folders. Using the ◀▶ keys to highlight the correct folder and press **SELECT**.

Mondo will display 'File Scan...' as it scans through all the files on your Mac or PC.

PLEASE NOTE If you have a large number of files, this operation could take several minutes.

When Mondo has finished scanning, it will display 'By Album'. You can now browse through the scanned media files, which will be organised 'By Album', 'By Artist', and 'Playlist' - if available.

IMPORTANT The first time Mondo Wi-Fi completes a file scan, a file called "reciva_media_cache" is written to the folder where the audio files are stored. This will speed-up subsequent file scans.

Listening To A Single Track

Scroll until 'By Artist' is on-screen then press **SELECT**. Now use the ◀▶ keys to scroll until your artist choice is displayed, then press **SELECT**. Now scroll until your desired album is displayed, and select it. The prompt 'Add To Queue' will appear at this point. Scroll until your chosen track name is on-screen and press **SELECT**. Your choice will now start to play.

Listening To A Complete Album

Using the ◀▶ keys, locate and select 'By Artist', then select your choice of artist. Now use the ◀▶ keys to scroll until your album choice is displayed, then press **SELECT**. The prompt 'Add To Queue' will appear at this point, press **SELECT** and your chosen album will start to play.

Queuing Tracks For Playback

Highlight your chosen track then press **SELECT**. 'Track Added To Queue' will now be displayed.

Queuing Albums For Playback

Highlight your chosen album then press **SELECT**. Scroll to 'Add To Queue' then **SELECT**. 'Tracks Added To Queue' will now be displayed.

Controlling Playback

- Use the **STOP** ■ button on Mondo's remote control to stop playback.
- Use the **PLAY/PAUSE** II► button to start a track, pause a track, or restart a paused track.
- Use **SKIP TO PREVIOUS TRACK** ◀ to start playback of the previous track in the queue.
- Use the **SKIP TO NEXT TRACK** ► to start playback of the next track in the queue.

Browsing A Queue

- Press the **BROWSE** button - the currently playing track name will be displayed. Use the ◀► keys to see the tracks that are queued for playback. To jump ahead and play a track from the queue, use the ◀► keys and **SELECT**.

Removing Tracks From A Queue

- Press the **BROWSE** button - the currently playing track name will be displayed.
- Use the ◀► keys to scroll to the track that you would like to remove from the queue. Press and hold the **STOP** key for 2 seconds. Mondo will display 'Delete Track?'.
- Use the ◀► keys to highlight either 'Yes' or 'No'. Press **SELECT** to make your selection. 'Removed From Queue' will be displayed if you decided to delete a track.
- To clear the entire contents of a queue, select 'Clear Queue' from the the main Media Player menu.

Playing Tracks Randomly

- Select and add the individual tracks to the queue as described previously.
- Return to the main top-line Media Player menu and select 'Playback Mode'.
- Use the ◀► keys to display 'Shuffle', then select **SELECT**.
- Confirm that 'Shuffle' mode should be enabled, by selecting YES or NO.

Repeating Tracks In A Queue

- Select the individual tracks as previously described.
- Return to the main top-line Media Player menu and select 'Playback Mode'.
- Scroll to display 'Repeat', then press **SELECT** button.
- Confirm that 'Repeat' mode should be enabled, by selecting YES or NO.

Windows PC UPnP Set-Up

If your PC is running Microsoft Windows XP or Vista, then you can use Window Media Player 11 (WMP 11) to act as your UPnP (Universal Plug and Play) media server 1.0.

WMP 11 can be downloaded from Microsoft's website and installed by following the instructions detailed in its installation wizard.

- Once installed, Windows Media Player 11 will create a library from all the media files available to it on your PC. To add new media files to the library, select 'File > Add to Library... > Advanced Options', click 'Add' and choose the files you wish to add and click 'OK'.

- You will now need to connect Mondo Wi-Fi to Windows Media Player 11 and configure it to allow the radio to access your media library. In order to this, you will need to do the following:

- Keep pressing **BACK** to get to Mondo's top-line menu and then scroll to 'Media Player' and press **SELECT**.

- Now use the ◀► keys to scroll to 'UPnP Servers' and press **SELECT**. Mondo will scan for all available UPnP servers. Note, it may take a few seconds for Mondo to complete its scan and before the scan has been completed. Mondo will display '[Empty]'. Mondo will continue to display '[Empty]' if no UPnP servers are found.

- If "No PC Found" is displayed on Mondo's display, click the library tab in Windows Media Player and select media sharing, now select share my media and then click 'OK'.

- At this point you can scan for UPnP servers on Mondo Wi-Fi again, Mondo will now be listed as a unknown device in the media sharing window click the 'Allow' button and then click 'OK'. Mondo Wi-Fi should now be accessing your Windows Media Player Library.

PLEASE NOTE that only WMA files in Windows Media Player are accessible using UPnP.

Playing Music Using UPnP

- When the UPnP server is configured to share media files with Mondo Wi-Fi, you can begin playing music as follows:
- Press the **BACK** button until 'Stations' is displayed, then scroll to 'Media Player' option, now press the **SELECT** button.
- Use the ◀► keys to highlight 'UPnP Servers' and press **SELECT**. Mondo will scan for all available UPnP servers. Please note, it may take a few seconds for Mondo to complete its scan. Before the scan has been completed, Mondo will display '[Empty]' and continue to do so if no UPnP servers can be found.
- After a successful scan, select your UPnP server using the ◀► keys (if there is more than one UPnP server), and then pressing the **SELECT** button.

- Mondo will now list the media categories available from the UPnP server, e.g. 'Music', 'Playlists' etc. Use the ◀► keys to choose which category you wish to browse, then press **SELECT**. Use the ◀► keys to highlight a sub category and press **SELECT**. Scroll to highlight the media files that you wish to play, then press **SELECT**. Mondo will display '[Add to Queue]', press **SELECT** again and Mondo will add the tracks to its queue and begin playing them automatically, added to the radio's queue.

Browsing A Queue

■ Press the **BROWSE** button - the currently playing track name will be displayed. Use the ◀ ▶ keys to scroll through the tracks that are queued for playback. If you want to jump to a particular place in the queue, press the **SELECT** button when the required track is displayed. It is important to

note here that media files scanned from the radio's 'Windows Shares' function can also be added to the radio's queue.

Full instructions on queue management, controlling music playback etc. under UPnP can be found on page 11.

Troubleshooting

If you are experiencing any problems with your Mondo Wi-Fi internet radio adaptor, please read the following 'troubleshooting' guide. Alternatively you can visit the HELP section of the Reciva website (www.reciva.com) the support section of the Revo website (www.revo.co.uk) or call our technical support staff on 01555 66 61 61.

If you have trouble connecting Mondo Wi-Fi to your wireless network, these steps may help to resolve the problem:

1. Confirm that a Wi-Fi connected PC can access the Internet (i.e. can browse the web) using the same network.
2. Check that a DHCP server is available, or that you have configured a static IP address on the radio. You can configure a static IP address on the radio using the menu item 'Configure -> Network Config -> Edit Config', and then select 'No' for 'Auto (DHCP)'.
3. Check that your network's firewall is not blocking any outgoing ports. As a minimum, Mondo Wi-Fi needs access to UDP and TCP ports 80, 554, 1755, 5000 and 7070.
4. Check your access point does not restrict connections to particular MAC addresses. You can view the radio's MAC address using the menu item 'Configure -> Network Config -> View Config -> MAC address'.

5. If you have an encrypted network, check that you have entered the correct key or pass phrase into the radio. Remember that text-format keys are case sensitive. If, when attempting to connect to an encrypted network, your radio displays: 'Wireless error' followed by a 5-digit number, then please ensure that you enter the correct pass phrase for the network. If the problem persists, then you may need to consult your network configuration.

If Mondo Wi-Fi can connect to the network successfully, but is unable to play particular stations, it may be due to one of the following causes:

1. The station is not broadcasting at this time of the day (remember it may be located in a different time zone).
2. The station has reached the maximum allowed number of simultaneous listeners.
3. The station is not broadcasting anymore.
4. The link on the radio is out of date.
5. The Internet connection between the server (often located in a different country) and you is slow. Try using a PC to play back the stream via the broadcaster's web site. If you can play back the station with a PC, but not via Mondo Wi-Fi - use the form at <http://www.reciva.com/> to notify Reciva of the problem - they can change the station data that is used by the radio.

Accessories and Spares

The following optional accessories and spare parts are available for Mondo. Please contact your local retailer or alternatively call us on 01555 666 161. Accessories and spare parts can also be purchased online at www.revo.co.uk

Remote Control:

Replacement Mondo remote control.



Mains Power Supply Unit:

Replacement power supply for Mondo.

Stereo RCA Leads:

Replacement leads to connect Mondo to a hi-fi system or similar.

Safety Information

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK: DO NOT REMOVE SCREWS, COVERS OR THE CABINET. NO USER SERVICING PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electrical shock, fire, etc.:

1. Read these instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the apparatus immediately afterwards with a clean cloth. Do not use abrasive clothes, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.
7. Do not block any ventilation openings. The ventilation shall not be impeded by covering the ventilation openings with items, such as newspapers, table clothes, curtains, etc.
8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding

prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. If the power cord is damaged, it must be repaired by a qualified repairer.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



PORTABLE CART WARNING

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
16. The mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
17. Please read Rating Labels at the bottom of the Sender and Receiver for power input and other safety information.

FCC

This device complies with Part 15 of the FCC Rules Operation that is subject to following two conditions:

- (1) This device may not cause harmful interference and,
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

REVO®

*Radio
is our
Religion*

Revo Technologies Ltd The Inox Building Caldwellside Lanark Scotland United Kingdom ML11 7SR

Telephone Support 01555 666 161

Online Support www.revo.co.uk/support support@revo.co.uk